

---

# Canon Powershot S 5is Owners Guide

---

*Canon Powershot S 5is Owners Guide* Downloaded from [www.everybodystreet.com](http://www.everybodystreet.com)  
by Lowery & Watson

---

## **INTRODUCTION: YOUR CANON POWERSHOT S5 IS - A COMPREHENSIVE OWNERS GUIDE**

---

Owners of the Canon PowerShot S5 IS know that this super-zoom bridge camera is a versatile tool for capturing everything from sweeping landscapes to distant wildlife. Released as an upgrade to the popular S3 IS, the S5 IS offers a

12x optical zoom, optical image stabilization, and the ability to shoot in full manual mode. Whether you have just acquired a used model or have been using yours for years, a thorough **Canon Powershot S 5is Owners Guide** is essential for unlocking the full potential of your camera. In this article, we will walk you through every essential feature, from initial setup to advanced shooting techniques, ensuring you get the best possible results from your

Canon PowerShot S5 IS.

---

## GETTING STARTED WITH YOUR CANON POWERSHOT S5 IS

---

# Unboxing and Initial Setup

When you first receive your camera, ensure that the box contains the Canon PowerShot S5 IS body, the 4x AA battery holder, a neck strap, lens cap with cord, USB interface cable, A/V cable, CD-ROM with software, and the printed manual. While the printed manual covers basics, this **Canon Powershot S 5is Owners Guide** will provide deeper insights.

Insert four AA batteries (NiMH

rechargeable recommended for longer life). Insert a compatible SD, SDHC, or MMC memory card. The camera supports cards up to 32GB, though larger capacities may require formatting in the camera. Press the power button to turn on the camera, set the date, time, and your preferred language.

# Understanding the Control Layout

The Canon PowerShot S5 IS features a control layout that balances ease of use with creative control. On the top you will find the mode dial (with options from

Auto to Manual), the shutter button, zoom lever, and the dedicated movie recording button. On the back, the 2.5-inch vari-angle LCD screen is one of the standout features, allowing you to shoot from high or low angles. The electronic viewfinder (EVF) above the screen is ideal for bright sunlight. The four-way controller with the FUNC/SET button in the center gives access to shooting parameters, while buttons for display, menu, and playback are within easy thumb reach.

---

## MASTERING THE CORE FEATURES OF THE CANON POWERSHOT S5 IS

---

# The 12x Optical Zoom and Image Stabilization

One of the main reasons photographers choose the Canon PowerShot S5 IS is its 12x optical zoom (equivalent to 36-432mm in 35mm terms). This lens gives you incredible reach. **Image Stabilization (IS)** is built into the lens and is crucial for sharp handheld shots at longer focal lengths. Always ensure IS is turned on (the button on the side of the lens barrel) unless you are using a tripod, where it should be turned off to avoid false corrections. For best results, use a fast shutter speed rule: at 432mm

equivalent, use at least 1/500 second.

# Shooting Modes: From Auto to Full Manual

The mode dial offers several paths to creative control:

- **Auto Mode (green icon):** Let the camera decide everything. Ideal for quick snapshots.
- **Program AE (P):** Automatic exposure but you can adjust ISO, white balance, and drive mode via the FUNC menu.
- **Tv (Shutter Priority):** Set the shutter speed; the camera selects

the aperture. Useful for freezing action or creating motion blur.

- **Av (Aperture Priority):** Set the aperture (f/2.7 at wide to f/3.5 at tele); camera sets shutter. Controls depth of field.
- **M (Manual):** Full control over both aperture and shutter speed. Also allows manual focus.

Your **Canon Powershot S 5is Owners Guide** should emphasize that the S5 IS has a built-in neutral density (ND) filter, activated automatically by the camera in certain modes. But in Manual mode, you can turn it on and off via the FUNC menu – useful for achieving a slow shutter speed in bright light.

## Super Macro Mode and Close- Up Photography

The Canon PowerShot S5 IS excels at close-up photography with its Super Macro mode (activated in the menu). In this mode, you can focus as close as 0 cm from the front of the lens (when zoomed to wide angle). Use a tripod and the self-timer to avoid camera shake. Experiment with aperture priority (Av mode) to control depth of field - a smaller aperture (higher f-number) keeps more of the subject sharp.

## Movie Mode: The First HD Video Capability

The S5 IS was one of the first PowerShots to offer 1080p HD video (at 15 fps, though standard definition 640x480 at 30 fps is smoother). To record, press the dedicated movie button at any time (except in playback). You can use optical zoom during recording, though the lens motor sound may be picked up by the internal microphone. For better audio, consider an external microphone via the Stereo Mini Jack (the S5 IS has a stereo mic built-in, but the external jack gives you

flexibility). The camera records in AVI format (Motion JPEG) which produces high quality but large file sizes.

---

### **ADVANCED TIPS FOR BETTER PHOTOS WITH THE CANON POWERSHOT S5 IS**

---

## Using the Vari-Angle LCD and Electronic Viewfinder

The 2.5-inch vari-angle LCD is one of the most useful features. Tilt it up for low-angle shots, down for overhead

compositions, or turn it inward to protect the screen when storing. In bright sunlight, switch to the EVF using the button near the viewfinder. The EVF has a diopter adjustment dial – set it so the information on the screen appears sharp.

## Customizing the FUNC Menu for Fast Access

Press the FUNC/SET button to bring up a vertical menu of frequently used settings: white balance, drive mode, ISO, metering mode, etc. You can customize which parameters appear in this menu?

Actually, the camera allows you to assign the Shortcut button (the button with a star icon) to one of several options: exposure lock, flash exposure compensation, etc. Consult your manual to set this up. This trick can speed up your shooting workflow significantly.

## Understanding the Histogram and Highlight Alert

Enable the histogram display (press DISP button multiple times during shooting). The histogram shows the distribution of

brightness in your image. A well-exposed photo typically has a gentle curve that doesn't peak sharply at the left (shadows) or right (highlights). The highlight alert (blinking areas in playback) indicates overexposed highlights - you may want to reduce exposure compensation by  $-1/3$  or  $-2/3$  EV.

## White Balance and Color Tuning

The Canon PowerShot S5 IS offers Auto, Daylight, Cloudy, Tungsten, Fluorescent, Fluorescent H, Custom, and Manual white balance. For accurate colors under mixed lighting, use Custom white balance by shooting a white or gray

card. You can also tweak color saturation and sharpness using the My Colors modes (Vivid, Neutral, Sepia, etc.). If you shoot Raw? The S5 IS does not support Raw, only JPEG. So getting white balance right in-camera is important.

---

## **TROUBLESHOOTING COMMON ISSUES - A PRACTICAL OWNERS GUIDE**

---

# Camera Not Turning On or Battery Drain

If your Canon PowerShot S5 IS fails to power on, check the batteries first. Use

fresh NiMH rechargeable batteries with a capacity of at least 2500 mAh. Alkaline batteries will drain quickly, especially when using the flash or reviewing images. Also ensure the battery compartment lid is securely closed. The camera uses a lens cap switch - if the lens cap is attached incorrectly, it might prevent the lens from extending. Remove the cap and try again.

# Lens Errors and Error Messages

Common error messages include "Lens Error" or "Zoom Error". This often occurs if the camera is bumped while the lens is extending. Turn off the camera, remove the batteries, wait 10 seconds, reinsert,

and try again. If the error persists, the lens mechanism may be jammed. Gently try to straighten any bent barrel parts, but if under warranty, seek Canon service. As prevention, always turn off the camera before putting it in a bag and avoid carrying it by the lens barrel.

## Flash Not Firing

Ensure the flash is raised (use the flash open button on the top). In Auto and some scene modes, the flash may not fire if the camera deems it unnecessary. In P, Tv, Av, or M modes, you can manually set flash to forced off or forced on via the FUNC menu. If the flash fails to fire in manual mode, the shutter speed may be set faster than the flash sync speed (1/125 second). Slow down

the shutter speed.

## Memory Card Errors

If you see "Card Error" or "Card Locked", ensure the write protect switch on the side of the SD card is slid up (unlocked). The camera is compatible with SD and SDHC cards up to 32GB. Larger cards (SDXC) are not supported. If a card error persists, format the card in the camera using the Format option in the menu, but note this erases all data.

---

### **MAINTENANCE AND CARE FOR YOUR CANON POWERSHOT S5 IS**

---

## Cleaning the Lens and LCD

Use a blower brush to remove dust from the lens surface. For smudges, use a microfiber cloth and a drop of lens cleaning solution – never apply liquid directly to the lens. The vari-angle LCD screen can be cleaned similarly. Avoid using paper towels or abrasive materials.

## Storing the Camera

When not in use, turn off the camera to retract the lens. Store in a cool, dry place. Use a camera bag to protect from

bumps and dust. Remove batteries if storing for more than a month to prevent leakage. The lens cap should always be on when the camera is not shooting.

## Firmware Updates

Canon released firmware updates for the PowerShot S5 IS to improve performance and fix bugs. Check the Canon support website – note that the last update was likely several years ago. Follow instructions exactly – you may need a freshly formatted SD card and fully charged batteries to apply the update.

---

### **ESSENTIAL ACCESSORIES FOR**

## THE CANON POWERSHOT S5 IS

### OWNER

---

To get the most out of your camera, consider these accessories:

- **Canon Lens Adapter LAH-DC20:** Allows you to attach 52mm filters (UV, polarizer, ND) and lens hood. This is essential if you want to protect the front element or use a polarizer for deep blue skies.
- **Teleconverter Lens TC-DC58C (1.5x) or Wide Converter WC-DC58C (0.7x):** Expand your focal length range. Attach via the adapter.
- **High Capacity NiMH Batteries:** Invest in four high-capacity (2700 mAh or more) batteries and a quality charger. The S5 IS is

- **External Flash (Canon Speedlite):** The S5 IS has a hot shoe for Canon EX-series Speedlites. This dramatically improves low-light shooting and allows bounce flash.
- **Remote Shutter Release:** Use a wired remote (optional) or the self-timer for shake-free long exposures.

---

### CONCLUSION: GET THE MOST FROM YOUR CANON POWERSHOT S5 IS

---

The Canon PowerShot S5 IS remains a capable bridge camera for enthusiasts who value reach, manual control, and excellent image stabilization. By

following this comprehensive **Canon Powershot S 5is Owners Guide**, you can master its myriad features, troubleshoot common issues, and maintain your camera for years to come. Embrace its strengths – especially the 12x zoom and vari-angle LCD – and you

will capture stunning images in a wide range of situations. Remember that practice and experimentation with the manual modes will unlock the true creative potential of this classic Canon camera. Happy shooting!